



# Enrolling keyfob transmitters



Your control panel must be programmed to recognise the unique identification code (ID) of all keyfobs or wireless keypads.

You must enter the user settings before you are able to select the enroll keyfob option.

Press the **NEXT** key twice until the screen reads user settings, press **OK** and enter your four digit code.

Using the **NEXT** key scroll along the menu until the display reads **ENROLL KEY FOB**, press **OK**. The display will read: **KEY FOB NO.**

Using the **NEXT** key select the number to which the keyfob is to be designated (e.g. No 5).

You must select a number which does not have a dark box beside it.

Press **OK** and the display will prompt you to initiate a transmission from the chosen keyfob.

Initiate the transmission by pressing any of the pushbuttons on the keyfob. In response, the "Happy Tune" will sound and the display will change to **KEY BOB NO: 5**

Press the **AWAY** key followed by the **OK** key to return to a ready state.

Push the \*(Star) key on your newly enrolled keyfob to test it.

A dark box will be displayed at the far right, to indicate that the keyfob has been enrolled as No. 5

Of course if you have any difficulty with the process on this page then feel free to contact our customer service team on **0845 55 70 999**.

Many Thanks